

E**O****S****EOS-ENVIRO**

26.1 Hooklift maintenance must be carried out according to the following program:

- DAILY OPERATIONS
- OPERATIONS AFTER 50 HOURS OF FUNCTIONING
- OPERATIONS AFTER 500 HOURS OF FUNCTIONING
- OPERATIONS AFTER 1000 HOURS OF FUNCTIONING
- YEARLY CHECK

DAILY OPERATIONS

Before start-up

1. Check the oil level inside the tank.
2. Grease the boom pins.
3. Grease the crossbar pins and the winching roller.
4. Check the flexible piping of the oleodynamic circuit.
5. Check the functioning of the overturning light.
6. Once finished using, reset all controls.

AFTER 50 HOURS OF FUNCTIONING

1. Check the connections of the false frame piping.
2. Check the status of the flexible piping and the junctions between the piping.
3. Check the seal of the oleodynamic cylinders and of the valves.
4. Check the distributors.
5. Replace the oil filter cartridge.

AFTER THE FIRST 50 HOURS OF FUNCTIONING

1. Repeat checks of "50 hours of functioning".
2. Take particular care to detect any cracks on the equipment.
3. Replace the oil filter cartridge.

AFTER 1000 HOURS OF FUNCTIONING

1. Repeat checks of "500 hours of functioning".
2. Replace the oil filter cartridge.

YEARLY CHECK

1. Repeat checks of "1000 hours of functioning".
2. Completely filter the hydraulic oil.
3. Replace the oil filter cartridge.

No.89, 6F, Chingdong St., 70144 Tainan/Taiwan ROC * Website: www.eos-enviro.com

Ph.: +886 7 236 0474 * Fax: +886 6 2755 142 * Cell Phone: +886 9 3334 6753

Business No. 28980981 * Registered as Im- & Exporter by MOEA/BOFT

E-mail: eos@eos-enviro.com

M.C.A.